

## Midi free-standing Beacons / EvoSIGNAL

## Midi TwinLIGHT 115-230VAC BU



Part No.: 261.510.60 Series: EvoSIGNAL Midi



MECHANICAL DATA	
Height	130 mm
Diameter	85 mm
Materials	PC PC/ABS
Dome colour	Blue
Housing colour	Grey
Protection category	IP66
Connection	Push-in terminal
cross-sectional area minimum	0,25mm² / 24AWG
cross-sectional area maximum	1,50mm <sup>2</sup> / 16AWG
Working temperature minimum	-30°C
Working temperature maximum	+60°C
Weight with packaging	187 g
Product weight	145 g

ELECTRICAL DATA	
Operating voltage	115-230V
Operating voltage type	AC
Operating voltage frequency	50Hz at 230V 60Hz at 115V
Operating voltage tolerance	+/- 10%
Rated operational voltage	230 VAC
Rated operational current	65 mA
Rated inrush current	7A
Protection class	Protection class 2
Pollution degree	3
Overvoltage category	II
Isolation voltage	Ui = 250V; Uimp = 2.500V

OPTICAL DATA	
Light source	LED
Light colour	Blue
Optical signal image	Blink Permanent TwinLight
Blink frequency (Hz)	1 Hz
Service life optical	50,000 h minimum
Pulse- & pause Duration [ms]	423ON, 496OFF

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



# Midi free-standing Beacons / EvoSIGNAL

# Midi TwinLIGHT 115-230VAC BU


APPROVAL DATA		
Conforms with CE	Yes	
WEEE	Yes	
Conform with ATEX-directive	No	
Conforms with CCC	Yes	
Conforms with UL	cULus	
UL Type Rating	Type 12	
Conforms with FCC	No	
Conforms with IC	No	
EAC certificate available	Yes	
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)	
Conforms with AS-I	No	
ICAO Certification	No	
Conforms with DNV	No	
Conforms with RoHS CN	No	
Conforms with VdS	No	
MTTF-value [years]	559	

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Midi free-standing Beacons / EvoSIGNAL

## Midi TwinLIGHT 115-230VAC BU

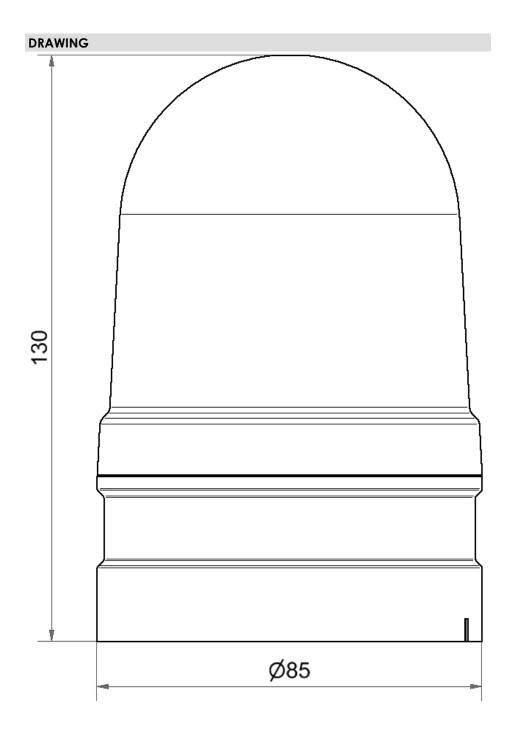

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.