

Modular 2/4-Channel PID Temperature Controllers with Screw Connector



TMH Series

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

[Common]

- Easy maintenance with detachable body and base terminal
- Power supply and communication with expansion connectors (up to 32 units)

[TMH2/4 Series (Control Module)]

- Multi-channel (2-channel/4-channel) input and output control: Expandable up to 32 units (64-channels/128-channels)
- 50 ms high-speed sampling rate and $\pm 0.3\%$ measurement accuracy
- Simultaneous heating and cooling control function and auto/manual control mode (patent: Korea Patent Registration 10-1624105)

[TMHA (Analog Input / Output Option Module)]

- 4 channels, various input types/temperature ranges/transmission outputs
- 50 ms high-speed sampling rate and $\pm 0.3\%$ measurement accuracy

[TMHE (Digital Input / Alarm Output Option Module)]

- 8 digital inputs / 8 alarm outputs

[TMHCT (CT Input Option Module)]

- 8 CT inputs

[TMHC (Communication Modules)]

- Allows connection of control modules and option modules to master devices
- Connect up to 32 control/option modules per communication model

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Install on a device panel to use.**
Failure to follow this instruction may result in fire.
- 04. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire.
- 05. Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- 06. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage

- 01. When connecting the power input and relay output, use AWG 20 (0.50 mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m.**
When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m.
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- 02. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage
- 03. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- 04. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor.
For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length.
For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.
In case of installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.

- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Switch or circuit breaker should be installed nearby users for convenient control.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing. After changing the input sensor, modify the value of the corresponding parameter.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Do not overlapping communication line and power line. Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Mounting multiple devices in any way other than the specified mounting method may cause heat to build up inside, which will shorten their service life. If there is a possibility of the ambient temperature rising to a temperature above the specified temperature range, take steps, such as installing fans, to cool the device. Be sure that the cooling method in not cooling just the terminal block. If only the terminal block is cooled, measurement errors may occur.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- Install DIN rail vertically from the ground.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max 2,000 m
 - Pollution degree 2
 - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

Control module

T	M	H	①	-	②	③	④
---	---	---	---	---	---	---	---

① Channel

2: 2 channels
4: 4 channels

② Alarm output

2: Alarm output 1/2 (2 channels)
4: Alarm output 1/2/3/4 (2 channels)
N: None (4 channels)

③ Control output

R: Relay output
S: SSR drive output
C: Selectable current or SSR drive output

④ Module type

B: Basic module
E: Expansion module
• Since the expansion module is not supplied with power/comm. terminal. Use it with the basic module.

Option module

Model	Input	Output
TMHA-42AE	Temperature sensor / Analog input 1 to 4	Transmission output (0/4 - 20 mA) 1 to 4
TMHE-82RE	Digital input 1 to 8	Alarm output 1 to 8
TMHCT-82NE	CT input 1 to 8	-

Communication module

Model	Connection type	Protocol
TMHC-22LE	RS422, RS485	Modbus RTU, PLC Ladderless communication
TMHC-22EE	Ethernet (10BaseT)	Modbus TCP

Firmware Version and Manual

Additional settings may be required if the firmware version is different between the connected modules.

Please refer to the user manual and the user manual for communication, and be sure to follow cautions written in the technical descriptions.

Visit our website (www.autonics.com) to download manuals.


DAQMaster

- DAQMaster is comprehensive device management program. It is available for parameter setting, monitoring.
- Visit our website (www.autonics.com) to download the user manual and the program.


Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.


Side

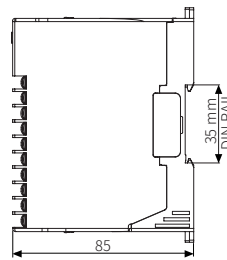

Front

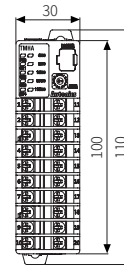

Inside

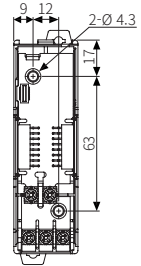

Specifications

Control module

Model	TMH2	TMH4
No. of channels	2 channels	4 channels
Sampling period	50 ms (2 channels or 4 channels synchronous sampling)	
Input specification	Thermocouple, RTD, Analog (refer to 'Input Specification')	
CT input	<ul style="list-style-type: none"> • 0.0 - 50.0A (primary current measurement range) • CT ratio: 1/1,000, • Measurement accuracy: $\pm 5\%$ F.S. ± 1 digit 	
Digital input	<ul style="list-style-type: none"> • Connect input ON: ≤ 1 kΩ, OFF: ≥ 100 kΩ • Solid state input Residual voltage: ≤ 0.9 V, Leakage current: ≤ 0.5 mA • Outflow current: ≈ 0.3 mA per input 	-
Control type	Heating, cooling, heating & cooling: ON/OFF, P, PI, PD, PID control	
Control output	<ul style="list-style-type: none"> • Relay: 250 VAC \sim 3 A 1a mechanical life cycle: $\geq 10,000,000$ operations, electrical life cycle: $\geq 100,000$ operations • SSR: 12 VDC \rightleftharpoons ± 3 V, ≤ 20 mA • Current⁽¹⁾: DC 4 - 20 mA or DC 0 - 20 mA (Load: ≤ 500 Ω) 	
Alarm output	250 VAC \sim 3 A 1a Mechanical life cycle: $\geq 10,000,000$ operations Electrical life cycle: $\geq 100,000$ operations	-
Communication	Modbus RTU	
Hysteresis	<ul style="list-style-type: none"> • Thermocouple / RTD: 1 to 100 (0.1 to 100) $^{\circ}$C/$^{\circ}$F • Analog: 1 to 100 digit 	
Proportional band (P)	<ul style="list-style-type: none"> • Thermocouple / RTD: 1 to 999 (0.1 to 999.9) $^{\circ}$C/$^{\circ}$F • Analog: 0.1 to 999.9 digit 	
Integral time (I)	0 to 9,999 sec	
Derivative time (D)	0 to 9,999 sec	
Control period (T)	<ul style="list-style-type: none"> • Relay output, SSR drive output: 0.1 to 120.0 sec • Selectable current or SSR drive output: 1.0 to 120.0 sec 	
Manual reset	0 to 100 (0.0 to 100.0) %	
Insulation type	Double insulation or reinforced insulation (mark: \square), dielectric strength between the measuring input part and the power part: 1 kV	
Unit weight (packaged)	<ul style="list-style-type: none"> • Basic module: ≈ 178 g (≈ 251 g) • Expansion module: ≈ 173 g (≈ 246 g) 	

01) When the control output is set to the current output, the heater current value monitoring function through the CT input terminals is not available.


Option module

Model	TMHA-42AE
No. of channels	4 channels
Sampling period	50 ms (4 channels synchronous sampling)
Input specification	Thermocouple, RTD, analog (refer to 'Input Specification')
Transmission output	DC 4 - 20 mA or DC 0 - 20 mA (Load: ≤ 500 Ω)
Communication	Modbus RTU
Insulation type	Double insulation or reinforced insulation (mark: \square), dielectric strength between the measuring input part and the power part: 1 kV
Unit weight (packaged)	≈ 161 g (≈ 234 g)

Model	TMHE-82RE	TMHCT-82NE
No. of channels	8 points	8 points
Input specification	<ul style="list-style-type: none"> - Digital input • Connect input ON: ≤ 1 kΩ, OFF: ≥ 100 kΩ • Solid state input Residual voltage: ≤ 0.9 V, Leakage current: ≤ 0.5 mA • Outflow current: ≈ 0.3 mA per input 	<ul style="list-style-type: none"> - CT input • 0.0-50.0 A (primary current measurement range) • CT ratio: 1/1,000 • Measurement accuracy: $\pm 5\%$ F.S. ± 1 digit
Alarm output	250 VAC \sim 3 A 1a, • Mechanical life cycle: $\leq 10,000,000$ operations • Electrical life cycle: $\leq 100,000$ operations	-
Communication	• Comm. terminal: RS485, • PC loader: TTL • Protocol: Modbus RTU,	
Insulation type	Double insulation or reinforced insulation (mark: \square), dielectric strength between the measuring input part and the power part: 1 kV	
Unit weight (packaged)	≈ 166 g (≈ 239 g)	≈ 148 g (≈ 221 g)

Installation Method


■ Separating base terminal block

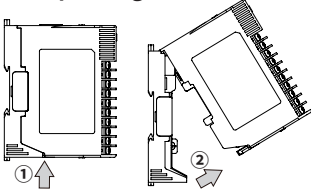

1. Push the lock lever at ①.
2. Pull the body of the module to ② direction.

• When connecting base terminal block, align the upper concave part (凹) of the body and the upper convex part (凸) of the base. If the upper parts are not align correctly, it may damage to the inner connector.


■ Connection between modules

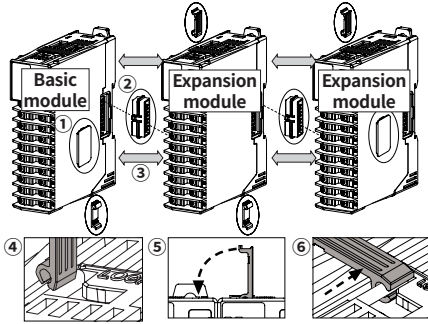

1. Remove END cover (①) of each module (except END cover of the first and last module).
2. ② Insert expansion connector (②) and connect them tightly to ③ direction (max. 31 units).
3. Insert module lock connector (④) to lock connector hole (⑤).
4. Push module lock connector to the lock direction (⑥).

• Supply adequate power for power input specifications and overall capacity.
(Max. power when connecting 32 modules: $32 \times 5 \text{ W} = 160 \text{ W}$)


■ Mounting with bolts



1. Refer to 'Separating base terminal block' to separate base terminal block.
 2. Install the module by using M4 screws to the ① direction of the inside mounting hole.
- Refer to the 'Dimensions' to check hole positions and dimensions of inside mounting hole.


■ Mounting on DIN rail

- Installation



1. Press the rail lock at the top / bottom of the module to the ① direction.
2. Hang the top rail lock to DIN rail.
3. Push to ① direction and press to ② direction.

- Separation



1. Press the module to ① direction.
2. Keep it pressed and pull it to ② direction.

■ Precautions

- Install the module vertically.
- Use end plates (sold separately, not available from Autonics) to fix firmly.

Error

Indicator			Description	Troubleshooting
Name	Status	Color		
PRW	ON	Red	□ channel error: Input value < Input range, Input value > Input range, Input sensor is open or not connected	When the error factor is resolved, it automatically returns to normal operation.
CH□	Flash	Red		



Sold Separately

- Communication converter: SCM-series
- CT connector cable: CICT4-□
- Current transformer (CT)

Connections


■ Control module

TMH2/4: 1 to 10 terminal

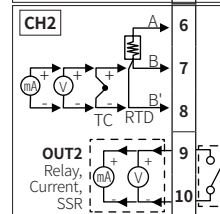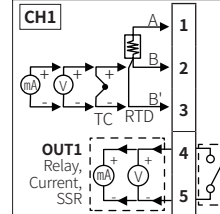



Terminal	Function 1	Function 2
1	CH1 input	A -
2	CH1 input	B TC, current, voltage +
3	CH1 input	B' -
4	CH1 output	+
5	CH1 output	-
6	CH2 input	A -
7	CH2 input	B TC, current, voltage +
8	CH2 input	B' -
9	CH2 output	+
10	CH2 output	-

TMH2: 11 to 20 terminal

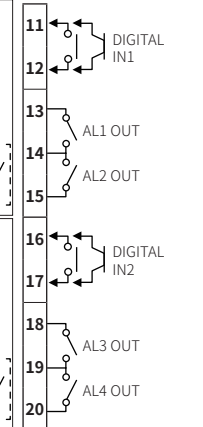


Terminal	Function
11	Digital input 1
12	Digital input 1
13	Alarm output 1
14	Ground
15	Alarm output 2
16	Digital input 2
17	Digital input 2
18	Alarm output 3
19	Ground
20	Alarm output 4

TMH4: 11 to 20 terminal

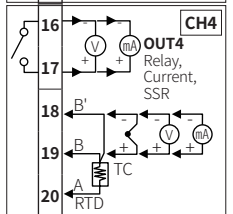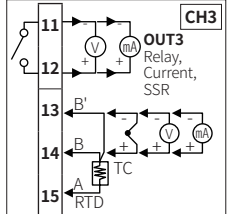


Terminal	Function 1	Function 2
11	CH3 output	+
12	CH3 output	-
13	CH3 output	+
14	CH3 input	B' TC, current, voltage -
15	CH3 input	A -
16	CH4 output	+
17	CH4 output	-
18	CH4 output	+
19	CH4 input	B' TC, current, voltage -
20	CH4 input	A -

CT input terminals on the top

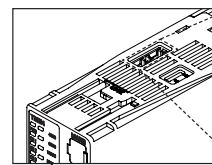


CT connector cable





Pin	Cable color	CT connection
1	Brown	CT 2 / 4
2	Blue	CT 2 / 4
3	White	CT 1 / 3
4	Black	CT 1 / 3

Power/Comm. terminal on the back

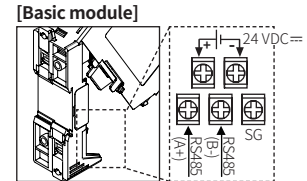


■ Option module

TMHA [Analog input / output]

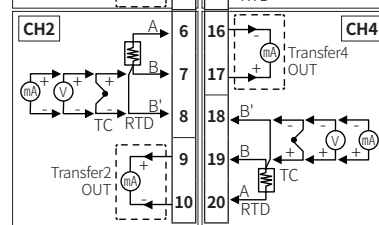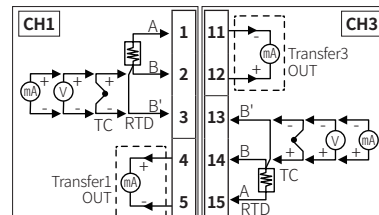


Terminal	Function 1	Function 2
1	CH1 input	A -
2	CH1 input	B TC, current, voltage +
3	CH1 input	B' -
4	CH1 output	+
5	CH1 output	-
6	CH2 input	A -
7	CH2 input	B TC, current, voltage +
8	CH2 input	B' -
9	CH2 output	+
10	CH2 output	-
11	CH3 output	+
12	CH3 output	-
13	CH3 output	+
14	CH3 input	A -
15	CH3 input	B TC, current, voltage -
16	CH4 output	+
17	CH4 output	-
18	CH4 output	+
19	CH4 input	A -
20	CH4 input	B TC, current, voltage -

TMHE [Digital input / Alarm output]

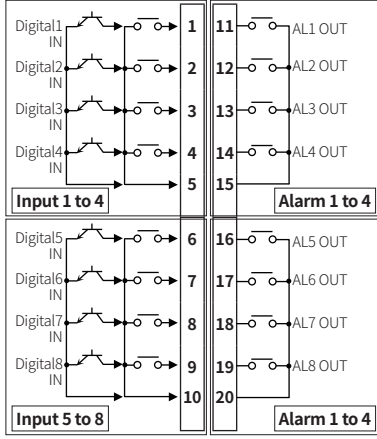

Terminal	Function
1	Digital input 1
2	Digital input 2
3	Digital input 3
4	Digital input 4
5	Ground
6	Digital input 5
7	Digital input 6
8	Digital input 7
9	Digital input 8
10	Ground
11	Alarm output 1
12	Alarm output 2
13	Alarm output 3
14	Alarm output 4
15	Ground
16	Alarm output 5
17	Alarm output 6
18	Alarm output 7
19	Alarm output 8
20	Ground


TMHCT [CT input]

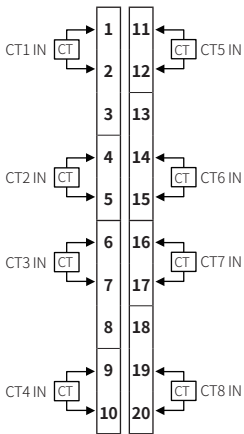

Terminal	Function
1	CT input 1
2	-
3	-
4	CT input 2
5	-
6	CT input 3
7	-
8	-
9	CT input 4
10	-
11	CT input 5
12	-
13	-
14	CT input 6
15	-
16	CT input 7
17	-
18	-
19	CT input 8
20	-


Communication module

TMHC-22LE [Ladderless comm.]

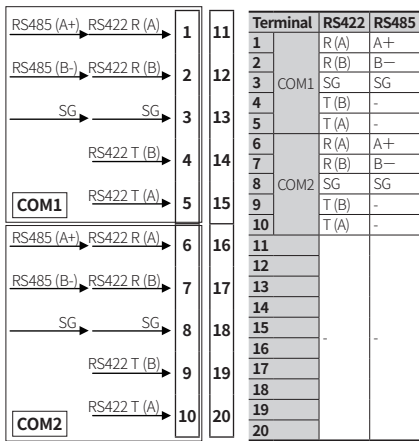


TMHC-22EE

[Ethernet comm.]

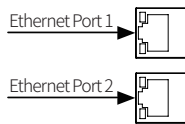


Terminal

• Unit: mm. Use ring or spade terminal as below.

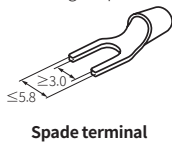


Spade terminal

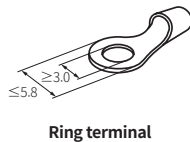

Ring terminal

Unit Descriptions

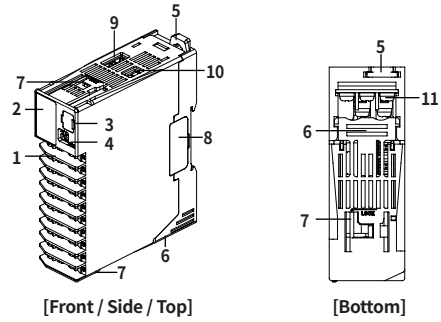

1. Input / Output Terminal

Refer to 'Connection' for the details about terminal description.

2. Indicator

- Control module: TMH2

Indicator	Status	Initial power ON ⁽¹⁾	Control output	Auto tuning ⁽²⁾	Alarm output			
					N.O.	ON	OFF	N.C
LED 1 LED 2	PWR (green) ⁽³⁾	-	ON	ON	-	-	-	-
PWR	CH1 (red)	-	ON	Flash	-	-	-	-
	CH2 (red)	-	ON	Flash	-	-	-	-
	CH 1 (red)	-	ON ⁽⁴⁾	OFF	-	-	-	-
CH 1	AL 1 (red)	-	ON ⁽⁵⁾	OFF	-	-	-	-
	AL 2 (yellow)	Flash (4,800 bps)	-	-	Module communication status ⁽⁶⁾	-	-	-
CH 2	AL 1 (yellow)	Flash (9,600 bps)	-	-	OFF	ON	OFF	ON
	AL 2 (yellow)	Flash (19,200 bps)	-	-	OFF	ON	OFF	ON
AL 3	AL 3 (yellow)	Flash (38,400 bps)	-	-	OFF	ON	OFF	ON
	AL 4 (yellow)	Flash (115,200 bps)	-	-	OFF	ON	OFF	ON

- Control module: TMH4

Indicator	Status	Initial power ON ⁽¹⁾	Control output	Auto tuning ⁽²⁾
PWR	CH1 (red)	-	ON	Flash
	CH2 (red)	-	ON	Flash
	CH 1 (red)	-	ON	Flash
CH 1	CH4 (red)	-	ON	Flash
	CH 2 (yellow)	Flash (4,800 bps)	-	-
CH 2	CH 3 (yellow)	Flash (9,600 bps)	-	-
	CH 3 (yellow)	Flash (19,200 bps)	-	-
CH 3	CH 4 (yellow)	Flash (38,400 bps)	-	-
	CH 4 (yellow)	Flash (115,200 bps)	-	-

- Option module: TMHA [Analog input / output]

Indicator	Status	Initial power ON ⁽¹⁾	Internal comm.	Transmission output			
				N.O.	ON	OFF	N.C
LED 1 LED 2	PWR (green) ⁽³⁾	-	ON	ON	-	-	-
PWR	CH1 (red)	-	-	ON	-	-	-
	CH2 (red)	-	-	ON	-	-	-
	CH 1 (red)	-	-	ON	-	-	-
CH 1	CH4 (red)	-	-	ON	-	-	-
	CH 2 (yellow)	Flash (4,800 bps)	-	-	Module communication status ⁽⁶⁾	-	-
CH 2	CH 3 (yellow)	Flash (9,600 bps)	ON (CH1)	-	-	-	-
	CH 3 (yellow)	Flash (19,200 bps)	ON (CH2)	-	-	-	-
CH 3	CH 4 (yellow)	Flash (38,400 bps)	ON (CH3)	-	-	-	-
	CH 4 (yellow)	Flash (115,200 bps)	ON (CH4)	-	-	-	-

- Option module: TMHE [Digital input, Alarm output]

Indicator	Status	Initial power ON ⁽¹⁾	Internal comm.	Alarm output			
				N.O.	Open	Closed	N.C.
LED 1 LED 2	PWR (green) ⁽³⁾	-	ON	ON	-	-	-
PWR	AL1 (red)	-	-	OFF	ON	OFF	ON
	AL2 (red)	-	-	OFF	ON	OFF	ON
	AL 1 AL 5 (red)	-	-	OFF	ON	OFF	ON
AL 1	AL4 (red)	-	-	OFF	ON	OFF	ON
	AL 2 AL 6 (yellow)	Flash (4,800 bps)	-	-	Module communication status ⁽⁶⁾	-	-
AL 2	AL5 (yellow)	Flash (9,600 bps)	-	OFF	ON	OFF	ON
	AL 3 AL 7 (yellow)	Flash (19,200 bps)	-	OFF	ON	OFF	ON
AL 3	AL6 (yellow)	Flash (38,400 bps)	-	OFF	ON	OFF	ON
	AL 4 AL 8 (yellow)	Flash (115,200 bps)	-	OFF	ON	OFF	ON

- Option module: TMHCT [CT input]

Indicator	Status	Initial power ON ⁽¹⁾	CT input ⁽⁸⁾	Internal comm.
PWR	AL1 (red)	-	ON (40.1 to 50.0 A)	-
	AL2 (red)	-	ON (30.1 to 40.0 A)	-
	AL 1 AL 5 (red)	-	ON (20.1 to 30.0 A)	-
AL 1	AL4 (red)	-	ON (10.1 to 20.0 A)	-
	AL 2 AL 6 (yellow)	Flash (4,800 bps)	-	-
AL 2	AL5 (yellow)	Flash (9,600 bps)	ON (40.1 to 50.0 A)	-
	AL 3 AL 7 (yellow)	Flash (19,200 bps)	ON (30.1 to 40.0 A)	-
AL 3	AL6 (yellow)	Flash (38,400 bps)	ON (20.1 to 30.0 A)	-
	AL 4 AL 8 (yellow)	Flash (115,200 bps)	ON (10.1 to 20.0 A)	-

- Communication module: TMHC-22LE [Ladderless communication]

Indicator	Status	Initial power ON ⁰⁹⁾	Internal comm.	Connection	Ladderless communication
LED 1 LED 2 PWR	PWR	Flash (4,800 bps)	Flash (green)		Flash (red, read operation)
	(red)	Flash (9,600 bps)	Flash (TMH2/4)		-
	(red)	Flash (19,200 bps)	Flash (TMHA)		-
	(red)	Flash (38,400 bps)	Flash (TMHE)		-
	(red)	Flash (115,200 bps)	Flash (TMHCT)		-
LED 2	(yellow)	Flash (4,800 bps)		ON	Flash (send operation)
	(yellow)	Flash (9,600 bps)		ON (TMH2/4)	-
	(yellow)	Flash (19,200 bps)		ON (TMHA)	-
	(yellow)	Flash (38,400 bps)		ON (TMHE)	-
	(yellow)	Flash (115,200 bps)		ON (TMHCT)	-

- Communication module: TMHC-22EE [Ethernet communication]

Indicator	Status	Initial power ON	Internal comm.	Connection
LED 1 LED 2 PWR	PWR (green)	ON	Flash (external device)	
	(red)	-	Flash (TMH2/4)	
	(red)	-	Flash (TMHA)	
	(red)	-	Flash (TMHE)	
	(red)	-	Flash (TMHCT)	
LED 2	(yellow)	-	ON	Flash (Ethernet comm.)
	(yellow)	-	-	ON (TMH2/4)
	(yellow)	Sequence-flashing vertically for 5 sec	-	ON (TMHA)
	(yellow)	-	-	ON (TMHE)
	(yellow)	-	-	ON (TMHCT)

- 01) At the moment when power is on, the indicator of set communication speed flashes for 5 sec.
- 02) Indicator of the channel, which is in the process of auto-tuning, flashes at 1 sec interval.
- 03) When communicating with external device, PWR indicator flashes.
- 04) Turns on, when CH1 outputs cooling control in the heating&cooling control method.
- 05) Turns on, when CH2 outputs cooling control in the heating&cooling control method.
- 06) • ON: Internal comm. (normal) • Flash: Internal comm. (abnormal) • OFF: not communicating
- 07) • 1 sec interval flash: external comm. (normal) • ON: Internal comm. (normal) • Flash: Internal comm. (abnormal) • OFF: not Internal communicating
- 08) The indicator corresponding to the certain setting value of CT input flashes according to the parameter.
• LED 1: CT Input Value Indication Lamp1 • LED 2: CT Input Value Indication Lamp2
- 09) At the moment when power is on, the indicator of communication speed flashes for 5 sec at 1 sec interval.
• LED 1: HOST 1 • LED 2: HOST 2

3. PC loader port

PC loader port supports serial communication between single module and PC. It needs communication converter for communicating.

4. Communication address setting switch (SW1)

Set the communication address. If changing the communication address by setting switch, use the flat head driver which is 2mm size or plastic driver. If not, it may cause product damage.

5. Rail lock

Rail lock helps installing the device. Refer to 'Installation Method' for the details.

6. Lock lever

Lock lever holds module body and base tightly.

7. Module lock connector hole

When connecting modules, insert module lock connector in the hole in order to enhance coherence between them.

8. END Cover

When connecting modules, remove END cover in order to connect expansion connector.

9. CT input Terminal [Control module]

Refer to 'Connection' for the details.

9. Communication mode switch (SW2) [Ladderless communication module]

Select communication mode between RS485 and RS422.

10. Communication address group switch (SW2) [Control module]

When setting the communication address over 16, select +16.

11. Power / Communication terminal [Control basic module]

Supplies power to both basic control/expansion module and communicates with one or more module.


Configuration Example

TMH2/4 expansion module, TMHA, TMHE and TMHCT are should be used with TMH2/4 basic module.

Each module is available to monitoring at DAQMatser via PC loader.


- Internal comm.: Receiving/Sending data between TMH2/4 and TMHA/E/CT
- External comm.: Communication with master for controlling

■ Control module: TMH2/4, Option module: TMHA/E/CT inter-working

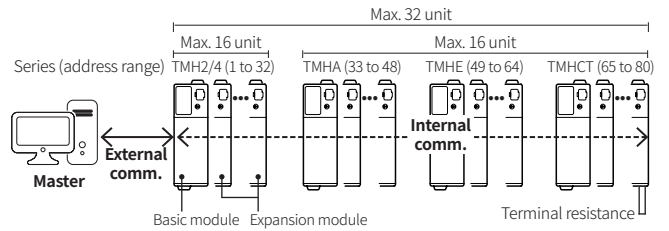

■ Communication module: TMHC

Ladderless communication

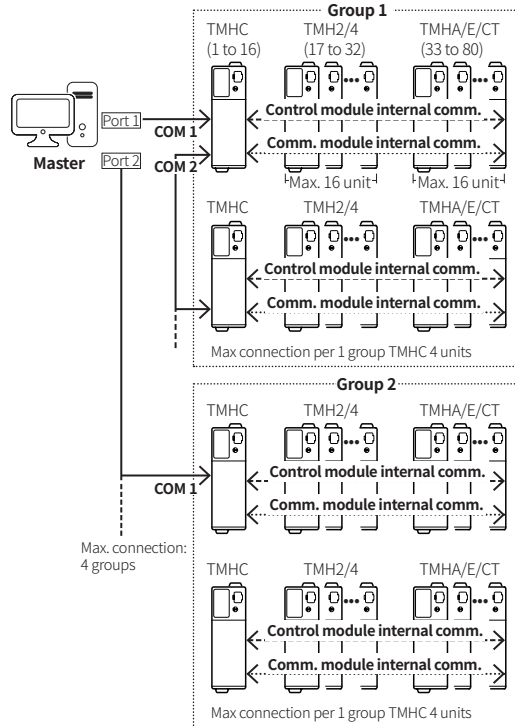

Ethernet communication

